



LN-R408D Quick Setup Guide



 
List of Parts

Accessories


Please make sure the following items are included with your LCD TV. If any items are missing, contact your dealer.




Remote Control (BN59-00460A)
& Batteries (AAA x 2)




RF Cable
(AA39-00039A)

 


Power Cord
(3303-000085)

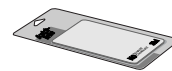


Cleaning Cloth
(BN63-001798A)

 


Owner's Instructions

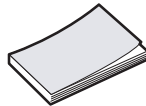

Anynet AV
Owner's
Instructions

 


Cover-Bottom
LN-R408D
(BN63-01640A)

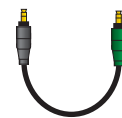

Anynet Cable
(BN39-00518B)

Connecting Antenna/Cable TV

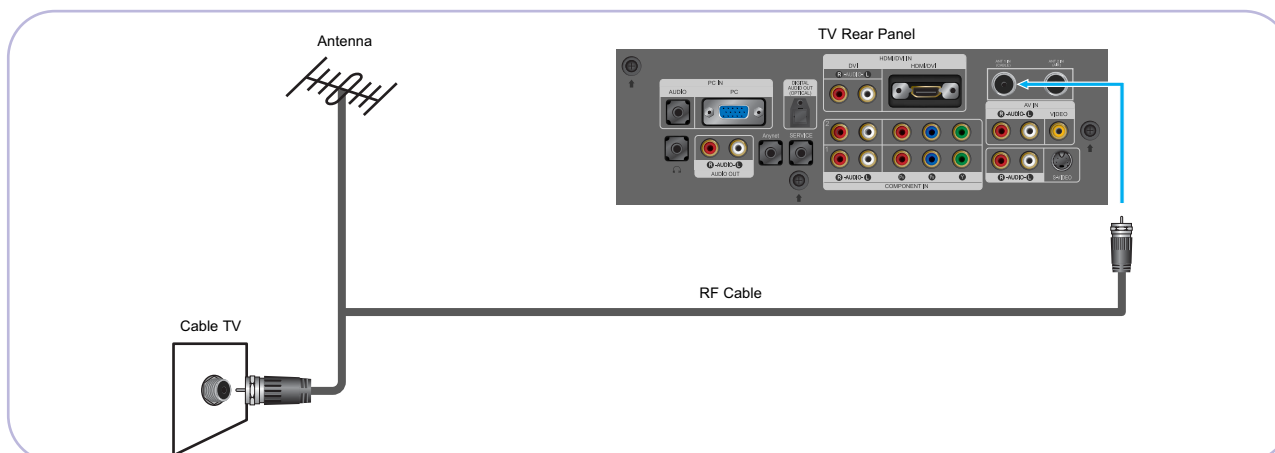


- 1 Plug the antenna/cable TV lead into the ANT1 IN (CABLE) terminal on the bottom of the back panel.

! When connecting the RF cable to the antenna input terminal, keep the copper wire portion of the RF cable straight to avoid bending it.

✎ For more detailed antenna/cable TV connections, see pages 7-10 of the owner's manual.


Connecting a VCR

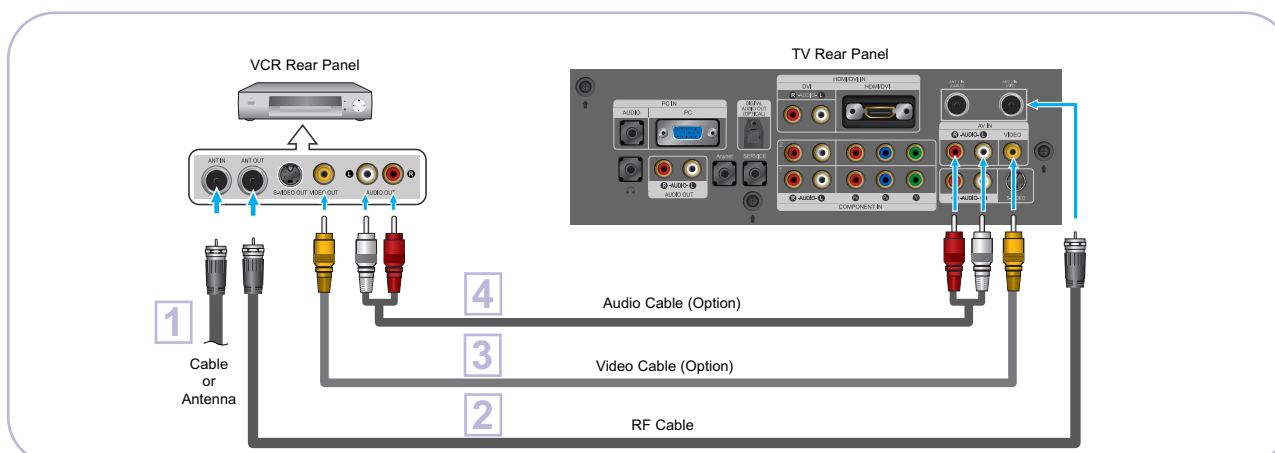

- 1 Connect the cable or antenna to the ANT IN terminal on the back of the VCR.
- 2 Connect an RF cable between the ANT OUT terminal on the VCR and the ANT1 IN (CABLE) or ANT 2 IN (AIR) terminal on the TV.
- 3 Connect a video cable between the VIDEO OUT jack on the VCR and the AV IN [VIDEO] jack on the TV.
- 4 Connect an audio cable between the AUDIO OUT jacks on the VCR and the AV IN [R-AUDIO-L] jacks on the TV.

✎ If you have a "mono" (non-stereo) VCR, use a Y-connector (not supplied) to hook up to the R-AUDIO-L jacks on the TV.

Connecting an S-VHS VCR

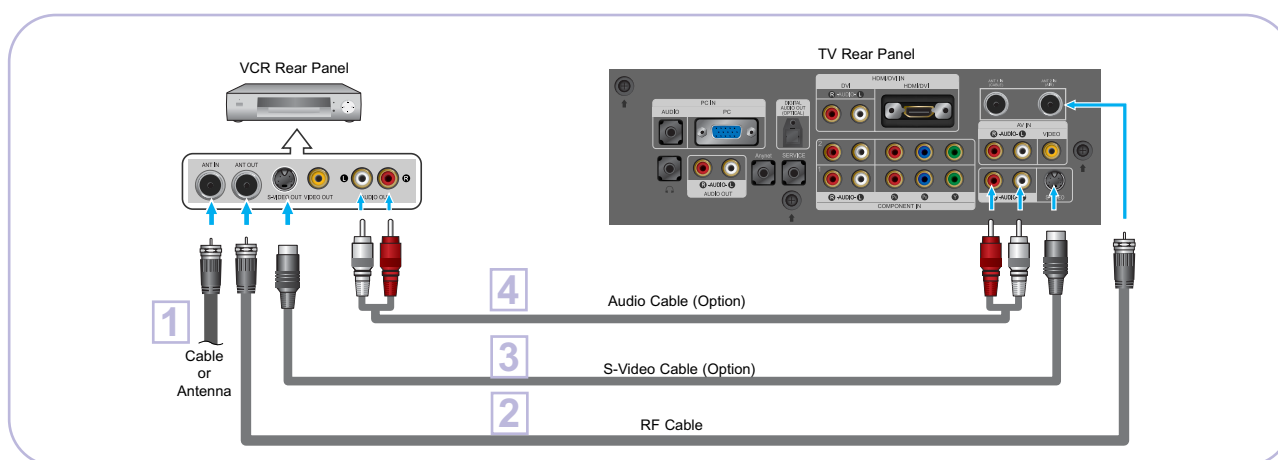


- 1** Connect the cable or antenna to the ANT IN terminal on the back of the VCR.
- 2** Connect an RF cable between the ANTOUT terminal on the VCR and the ANT1 IN(CABLE) or ANT 2 IN(AIR) terminal on the TV.
- 3** Connect an S-video cable between the S-VIDEO OUT jack on the VCR and the [S-VIDEO] jack on the TV.
- 4** Connect an audio cable between the AUDIO OUT jacks on the VCR and the [R-AUDIO-L] jacks on the TV.



An S-Video cable is usually included with an S-VHS VCR.

Connecting a DVD/Samsung Set-top box via DVI

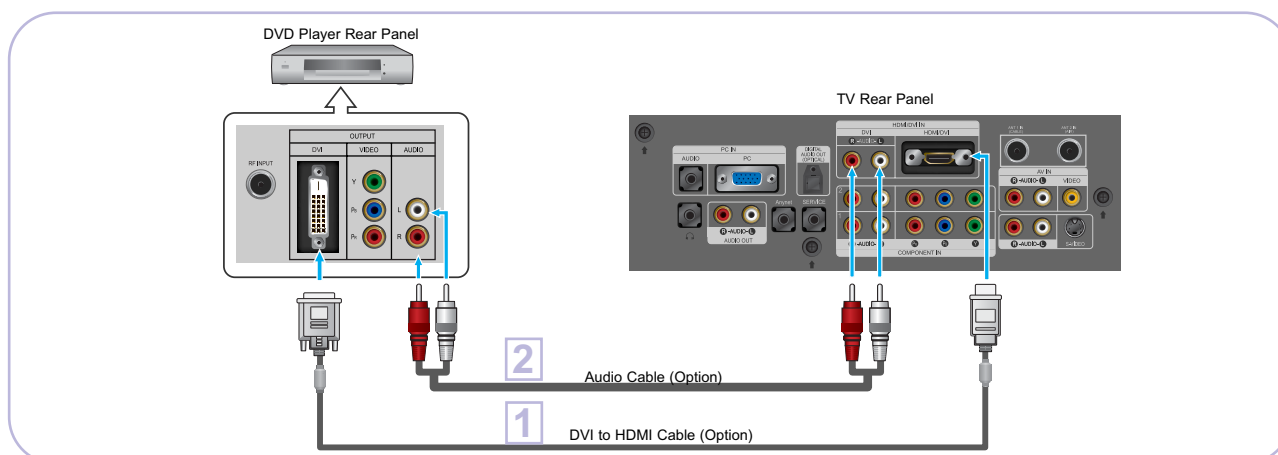


- 1** Connect a DVI to HDMI cable or DVI-HDMI Adapter (DVI to HDMI) between the HDMI/DVI connector on the TV and DVI connector on the DVD player/Set-top box.
- 2** Connect an audio cable between the DVI [R-AUDIO-L] jacks on the TV and the AUDIO OUT jacks on the DVD player/Samsung Set-top box.



DVI-D does not support PC function.


Connecting a DVD Player

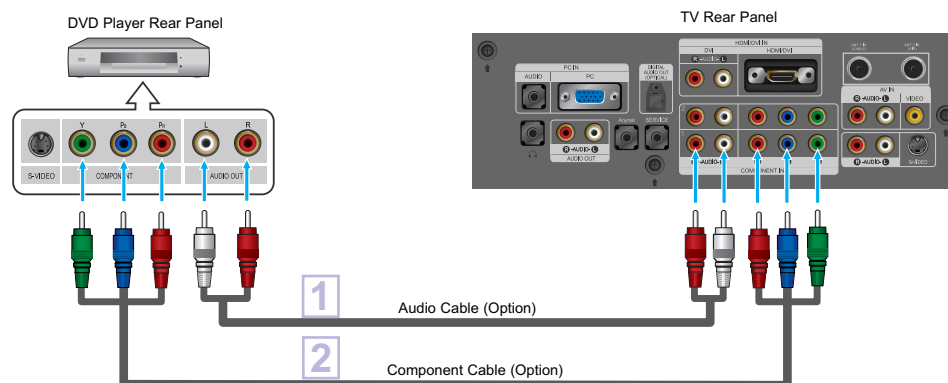

- 1** Connect an audio cable between the COMPONENT IN 1 [R-AUDIO-L] jacks on the TV and the AUDIO OUT jacks on the DVD player.
- 2** Connect a component video cable between the COMPONENT IN 1 or COMPONENT 1 IN [Pr, Pb, Y] jacks on the TV and the COMPONENT [Y, Pb, Pr] jacks on the DVD player.

Each external input source device (DVD, STB, VCR etc.) has a different back panel configuration.

Connecting a DVD/Set-top box via HDMI

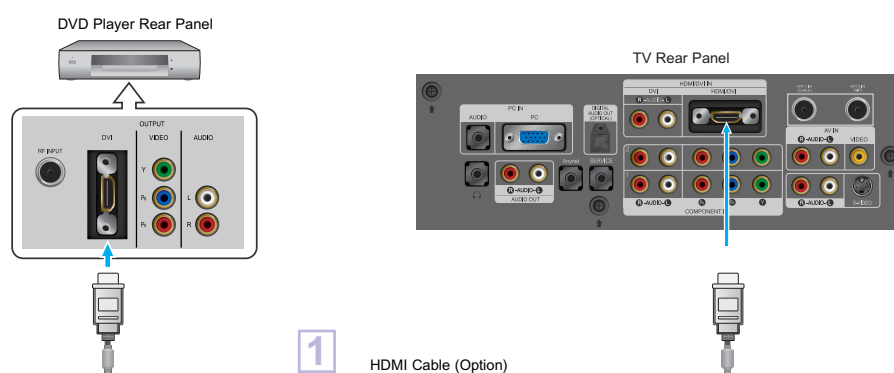


- 1** Connect a HDMI cable between the HDMI/DVI connector on the TV and the HDMI connector on the DVD player/Set-top box.

What is HDMI?


- HDMI, or high-definition multimedia interface, is a next-generation interface that enables the transmission of digital audio and video signals using a single cable without compression.
- "Multimedia interface" is a more accurate name for it especially because it allows multiple channels of digital audio (5.1 channels). The difference between HDMI and DVI is that the HDMI device is smaller in size, has the HDCP (High Bandwidth Digital Copy Protection) coding feature installed, and supports multi-channel digital audio.

Connecting a Digital Audio System

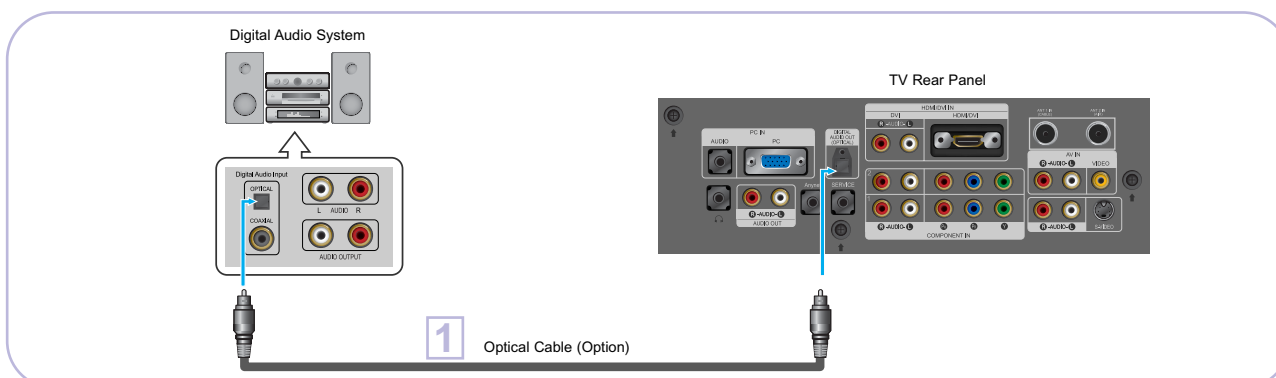


- 1 Connect an audio Optical between the DIGITAL AUDIO OUT (OPTICAL) jack on the TV and the Digital Audio Input (OPTICAL) jack on the Digital Audio System.

Connecting an Amplifier/DVD Home Theater

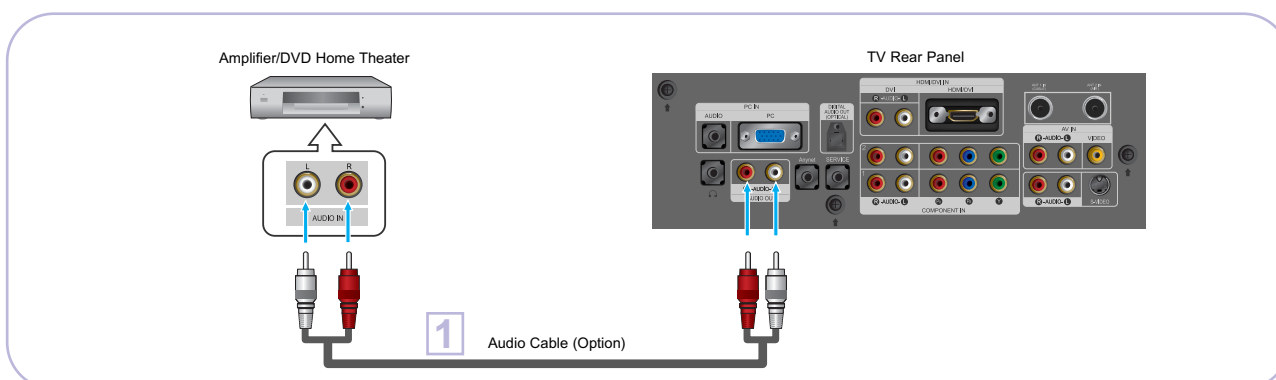

- 1 Connect an audio cables between the AUDIO OUT [R-AUDIO-L] jacks on the rear of your TV and the other ends to the corresponding audio in jacks on the Amplifier or DVD Home Theater.

Connecting a PC

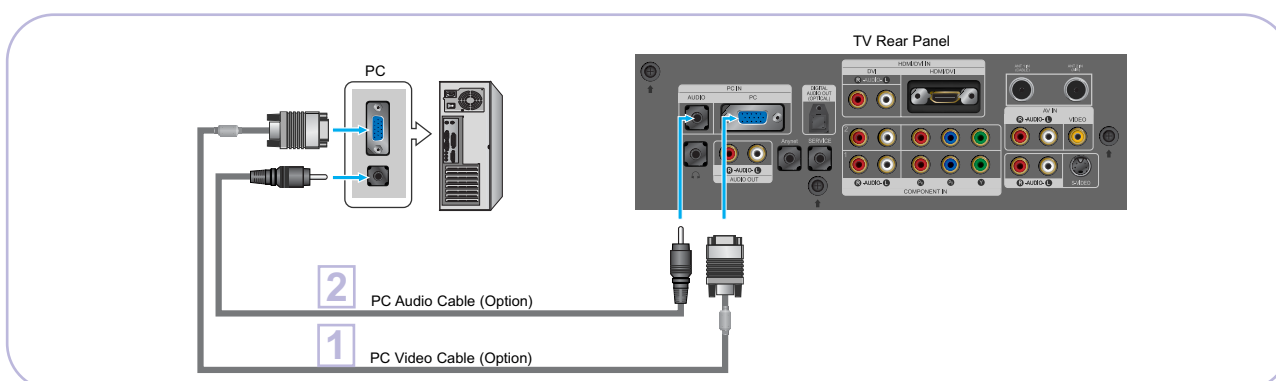

- 1 Connect the D- Sub cable to "PC" (PC IN) on the TV.
- 2 Connect the stereo audio cable to "AUDIO" (PC IN) on the TV and the other end to "Audio Out" of the sound card on the computer.

Plug & Play

When the TV is initially powered on, two basic customer settings proceed automatically and subsequently: Setting Auto program, Clock.

POWER



 
 
Menu language, Channels and Time will be set.

Start

1

Press the **POWER** button on the remote control.



The message "Menu language, Channels and Time will be set." is displayed. Press the **ENTER** button, then "Select the language of the OSD" menu is automatically displayed.

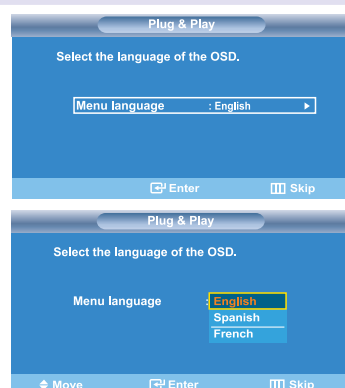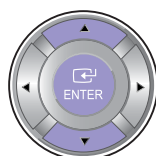

2



Press the **ENTER** button to enter the language.

  Press the **UP/DOWN** buttons to select language, then the **ENTER** button. "Select the antennas to memorize." menu is automatically displayed.

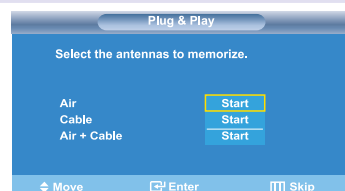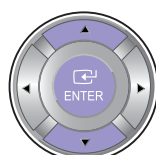

3

  Press the **UP/DOWN** buttons to memorize the channels of the selected connection. Press the **ENTER** button to select "Start".

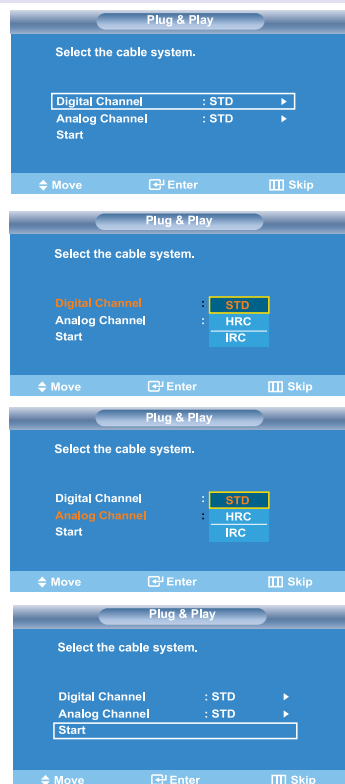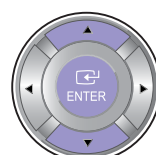


4

Press the **UP/DOWN** buttons to select "Digital Channel", then press the **ENTER** button.

Press the **UP/DOWN** buttons to select "STD", "HRC" or "IRC", press the **ENTER** button.



Press the **UP/DOWN** buttons to select "Analog Channel", then press the **ENTER** button. Press the **UP/DOWN** buttons to select "STD", "HRC" or "IRC", press the **ENTER** button.

 Press the **UP/DOWN** buttons to select "Start", then press the **ENTER** button to memorize the channels.

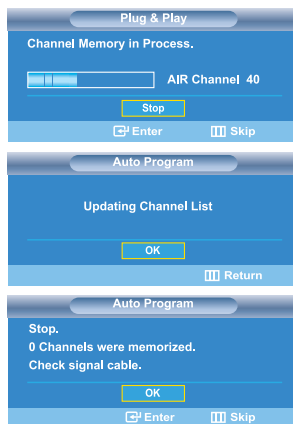


5

  The TV will begin memorizing all of the available channels. After all the available channels are stored, the Auto program menu reappears. Press the **ENTER** button when channel memorization is complete. "Set to daylight savings time." menu is auto matically displayed.

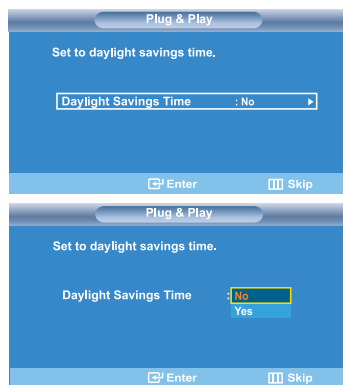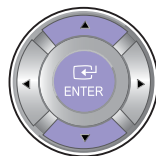


6

 Press the **ENTER** button. Press the **UP/DOWN** buttons to select "Yes" or "No", then the **ENTER** button. "Select your time zone in which you live" menu is automatically displayed.

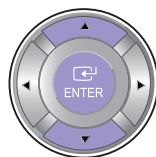

7

 Press the **UP/DOWN** buttons to highlight the time zone for your local area (and to move the highlight to the appropriate time zone on the map of the United States). Press the **ENTER** button. If you have received a digital signal, the time will be set automatically. If not, see page 70 to set the clock.




8

The message "Completed. Time will be updated automatically." is displayed. When you have finished, press the **ENTER** button.

Setting the Function Help

 Displays help on the menu functions.

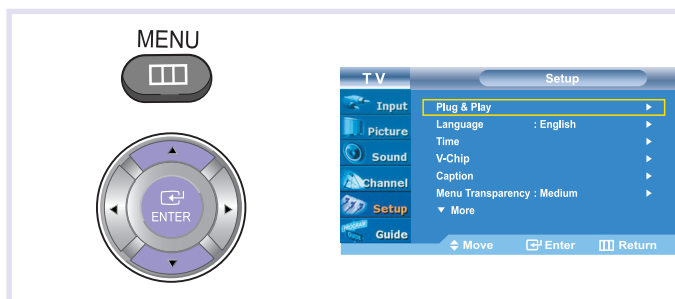


1

Press the **MENU** button to display the menu. Press the **UP/DOWN** buttons to select "Setup", then press the **ENTER** button.



2

 
Press the **UP/DOWN** buttons to select "Function Help", then press the **ENTER** button.

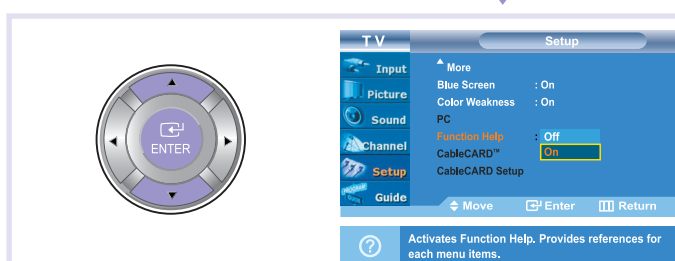

3


Press the **UP/DOWN** buttons to select "On", then press the **ENTER** button.

  To Select the Source

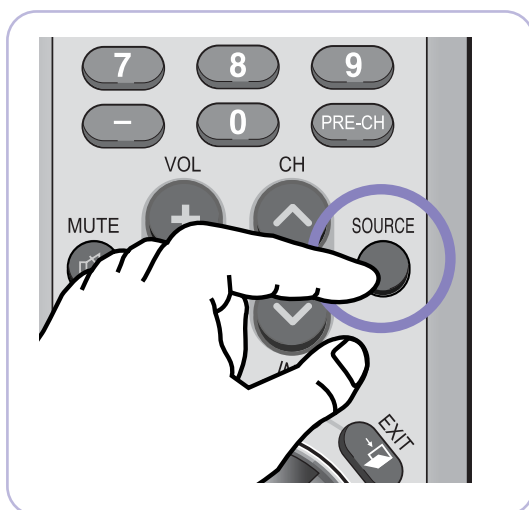


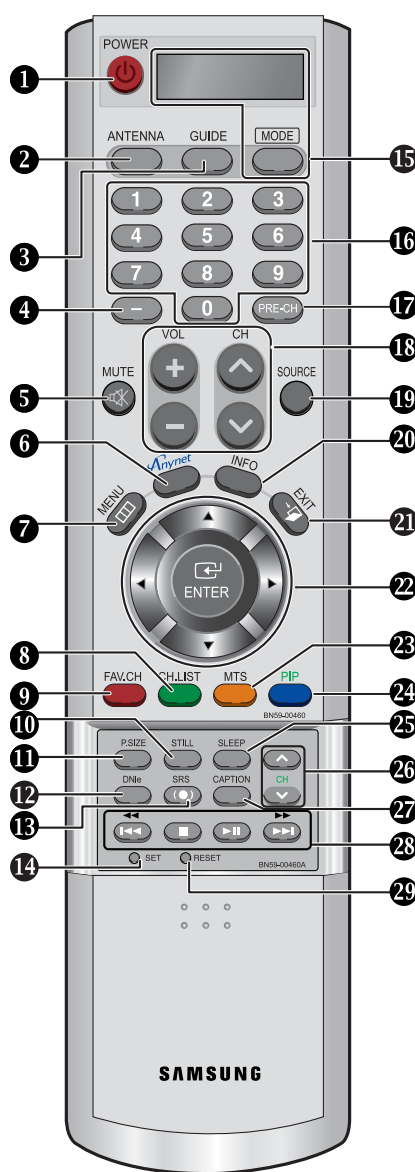 
Press the **SOURCE** button on the remote control

You can select the TV mode or an input source (AV, S-Video, Component 1, Component 2, PC, HDMI) connected to the TV set. Use this button to choose an input source that you would like to watch.

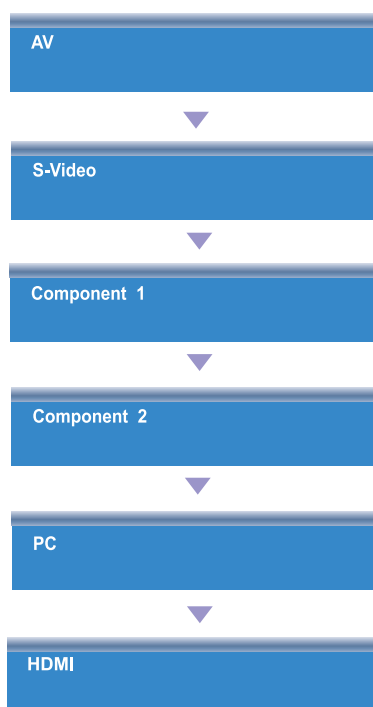

Remote control Functions Chart

- 1 POWER** 
Turns the TV on and off.
- 2 ANTENNA**
Press to select "AIR" or "CABLE".
- 3 GUIDE**
Press to display the on-screen Electronic Program Guide (EPG).
- 4 -**
Press to select additional channels (digital and analog) being broadcast by the same station. For example, to select channel "54-3", press "54", then press "-" and "3".
- 5 MUTE**
Press to temporarily cut off the sound.
- 6 Anynet**
Press the Anynet button to bring up the Anynet menu. Refer to "Aynet AV Owner's Instructions".
- 7 MENU**
Displays the main on-screen menu.
- 8 CH.LIST**
Displays the channel list.
- 9 FAV.CH**
Press to switch to your favorite channels.
- 10 STILL**
Press to stop the action during a particular scene.
Press again to resume normal video.
- 11 P.SIZE**
Press to change the screen size.
- 12 DNIe**
Press to improve the digital video quality.
- 13 SRS**
Selects TruSurround XT mode.
- 14 SET**
Adjusts 5 separate devices - TV, VCR, CABLE, DVD or Samsung Set-top box.
- 15 MODE**
Selects a target device to be controlled by the Samsung remote control (TV, VCR, CABLE, DVD or Samsung Set-top box)
Press to make sure that the TV LED, STB LED, VCR LED, CATV LED, or DVD LED is illuminated.
- 16 NUMERIC BUTTONS**
Press to change the channel.



- 17 PRE-CH**
Tunes to the previous channel.
- 18 CH ^ and CH v (Channel UP/Down)**
Press CH ^ or CH v to change channels.
VOL + and VOL -
Press to increase or decrease the volume.
- 19 SOURCE**
Press to display all of the available video sources.
- 20 INFO**
Use to see information on the current broadcast.
- 21 EXIT**
Press to exit the menu.
- 22 UP / DOWN / LEFT / RIGHT / ENTER**
Use to select on-screen menu items and change menu values.
- 23 MTS**
Press to choose stereo, mono or Separate Audio Program (SAP broadcast).
- 24 PIP**
Picture-in-Picture ON/OFF.
- 25 SLEEP**
Press to select a time for the TV to turn off automatically.
- 26 ^ CH v**
Displays the available channels in sequence.
(These buttons change channels in the PIP window only.)
- 27 CAPTION**
Controls the caption decoder.
- 28 VCR/DVD Functions (Only AnyNet mode)**
 - Rewind
 - Stop
 - Play/Pause
 - Fast Forward
- 29 RESET**
When your remote does not work, change the batteries and press the Reset button for 2-3 seconds before use.



Note: If you are trying to program this remote to use another manufacturer's DVD, VCR or Cable box, see page 31 of the owner's manual.

FAQ

Note

Check the following items before calling a Samsung authorized service center.



If a still image is displayed for an extended period of time, residual images or blurring may appear.

When you need to leave the TV unused for an extended period of time, adjust the settings so that the TV automatically goes into energy saving mode or activates the screen saver to display moving images.



Remote control malfunctions

Replace the remote control batteries. Clean the upper edge of the remote control (transmission window). Check the battery terminals.

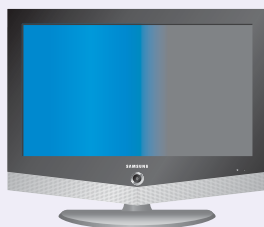 



Image is not centered on the screen.

Adjust the horizontal and vertical position. The screen position must be adjusted on the output source (i.e. STB) with a digital signal.



No picture or sound.

 Try another channel.
Press the SOURCE button.
Make sure the TV is plugged in.
Check the antenna connections.

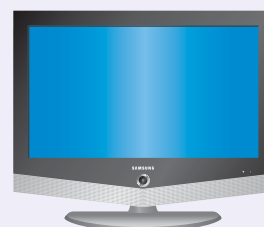


No sound or sound is too low at maximum volume.

First, check the volume of units connected to your TV (digital broadcasting receiver, DTV, DVD, cable broadcasting receiver, VCR, etc.). Then, adjust the TV volume accordingly.



Poor picture

 Try another channel.
Adjust the antenna.
Check all wire connections.

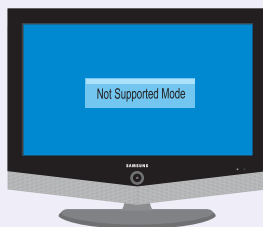

"Not Supported Mode" message.

Check the maximum resolution and the frequency of the Video Adapter. Compare these values with the data in the Display Modes.



Image is not stable and may appear to vibrate.

If the setting is not correct, use your computer utility program to change the display settings.